


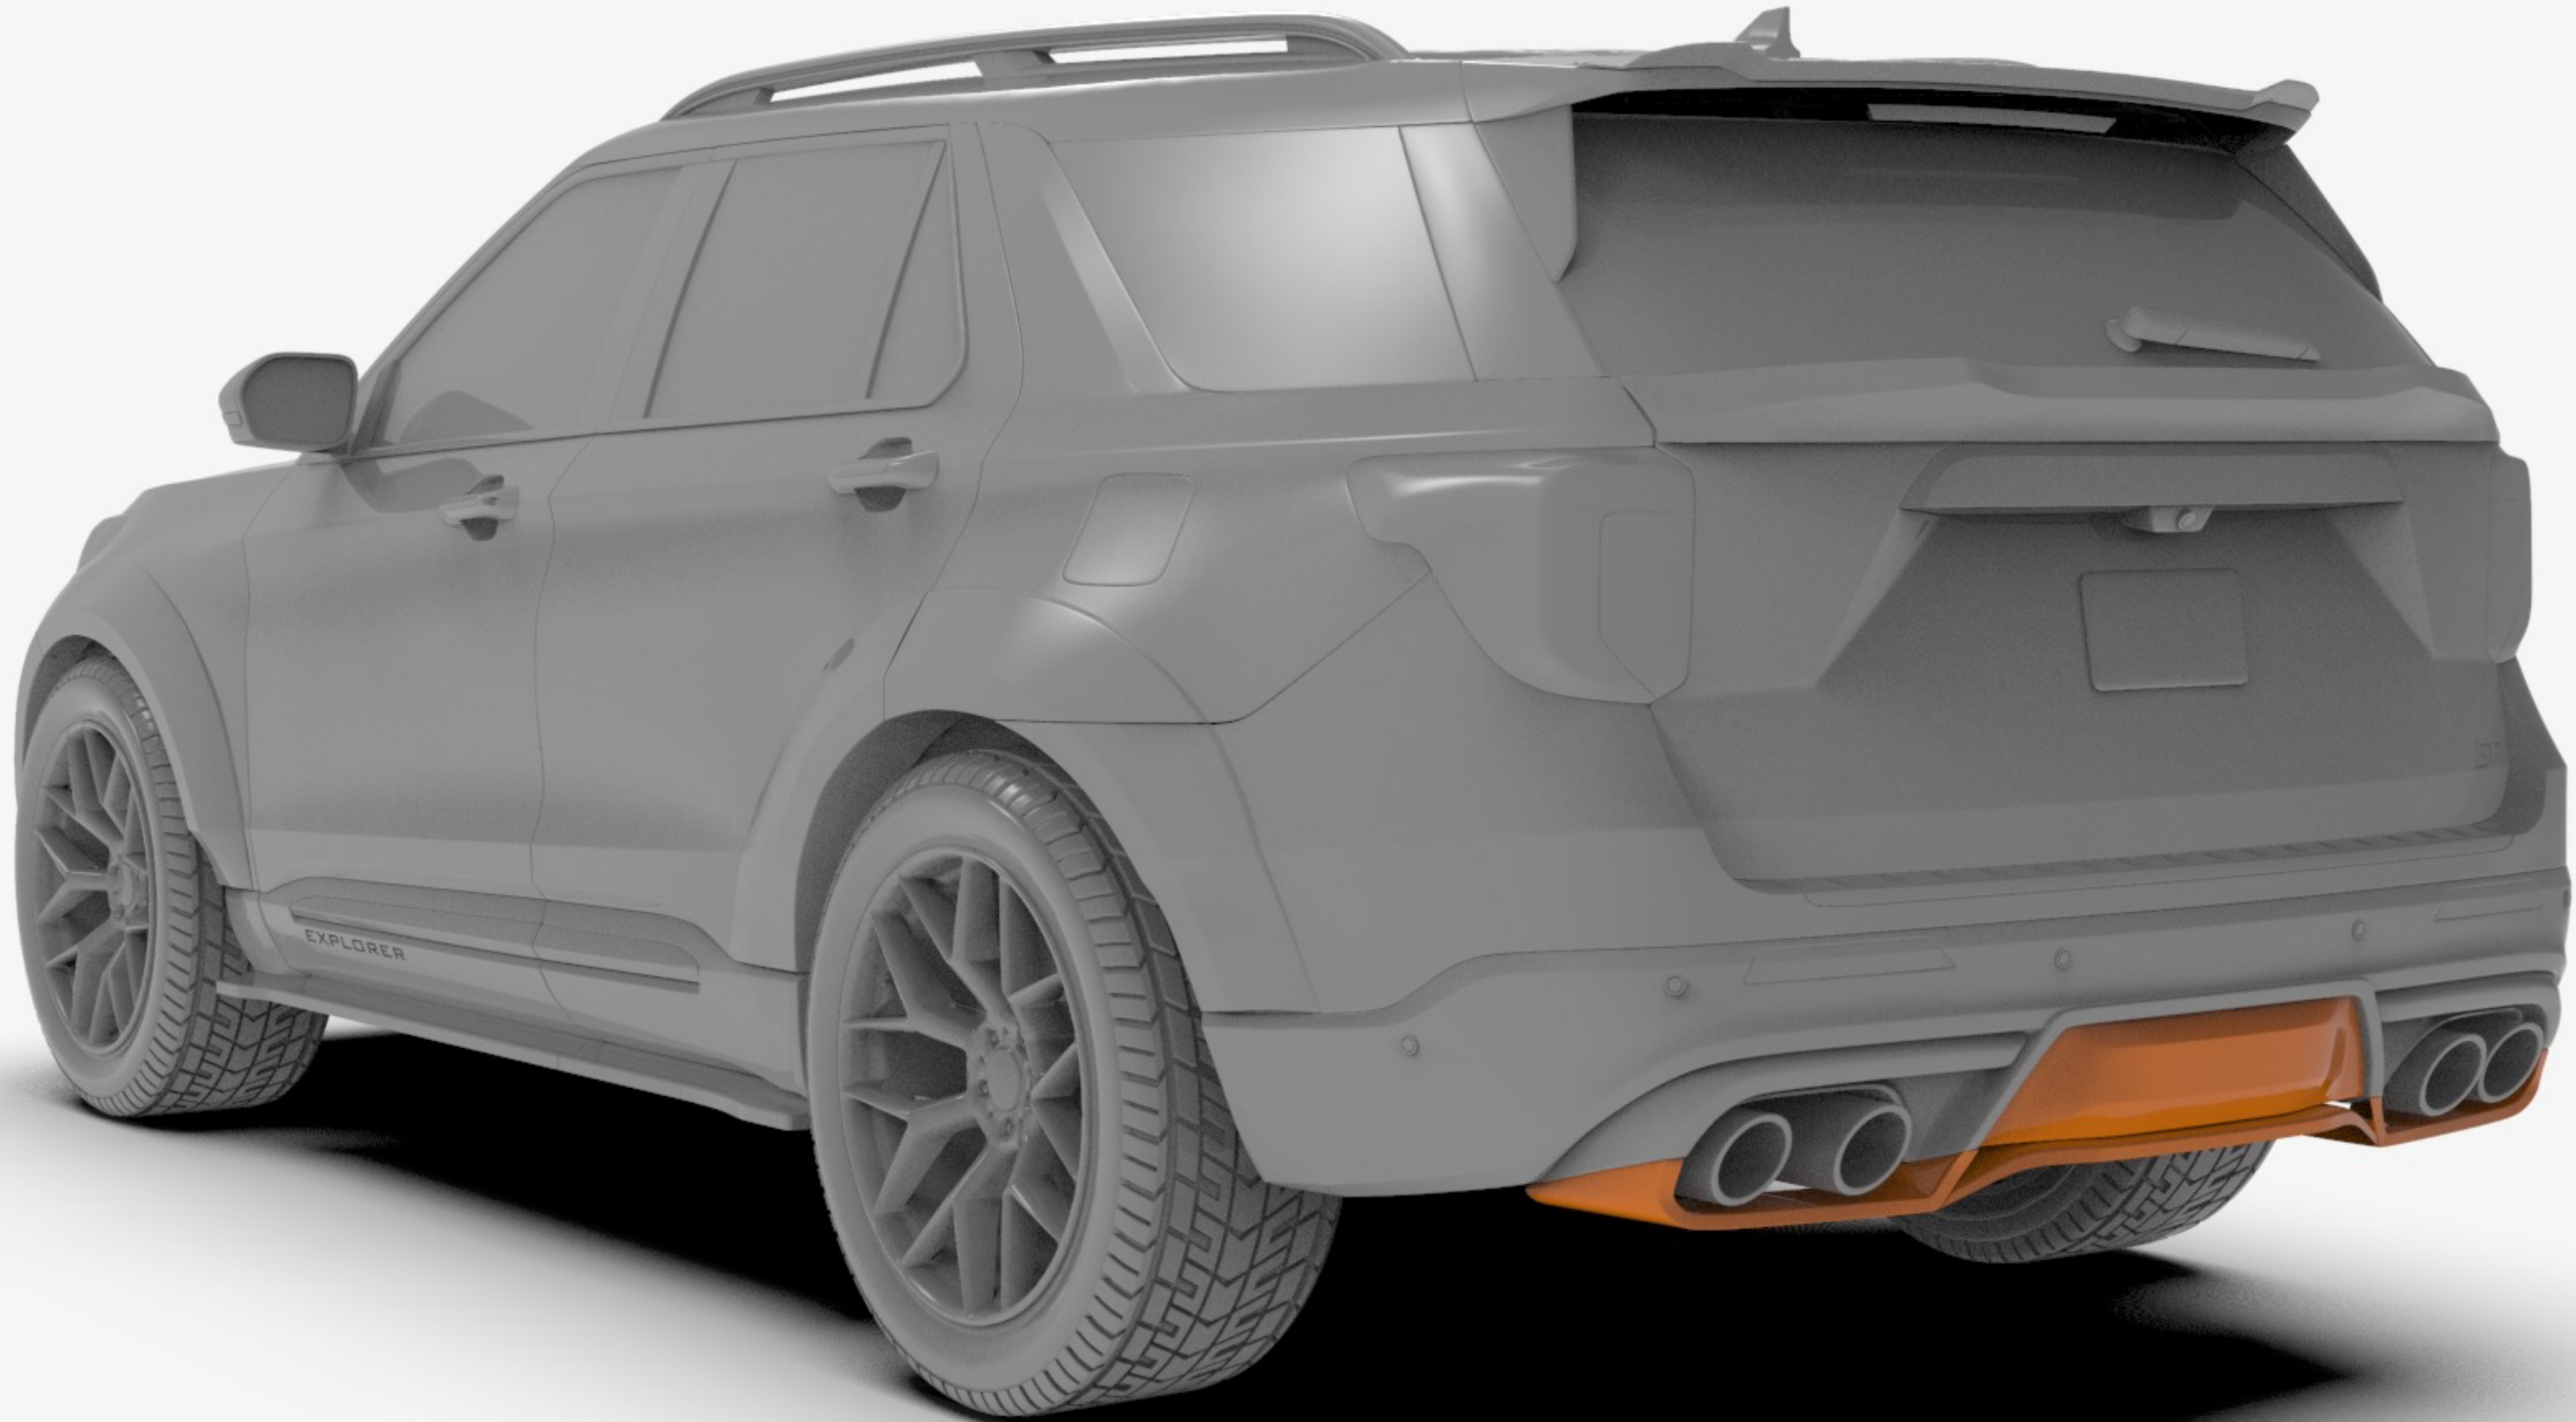

Waido
Ford Explorer
Rear End Set
Installation
Manual



Firstly, please check that you have received everything that you have ordered and the parts are not damaged.

This instruction assumes that parts are already painted, if you have ordered these parts the primer coat, paint the parts in your local bodyshop first. Read this Manual before installation.



! Side parts (under the exhaust ends) can only be put on a car with custom exhaust ends that are pointed to the back! Make sure that these specific exhaust ends are installed on your car before installing these parts!



First, you need to install the side parts. On each part you will find 5 holes. Find the correct and optimal position for the part, ask someone to hold the part in the right position for you and use a long sharp screwdriver to mark all 5 dots on the original plastic diffuser. After that, drill mounting holes in your original diffuser.

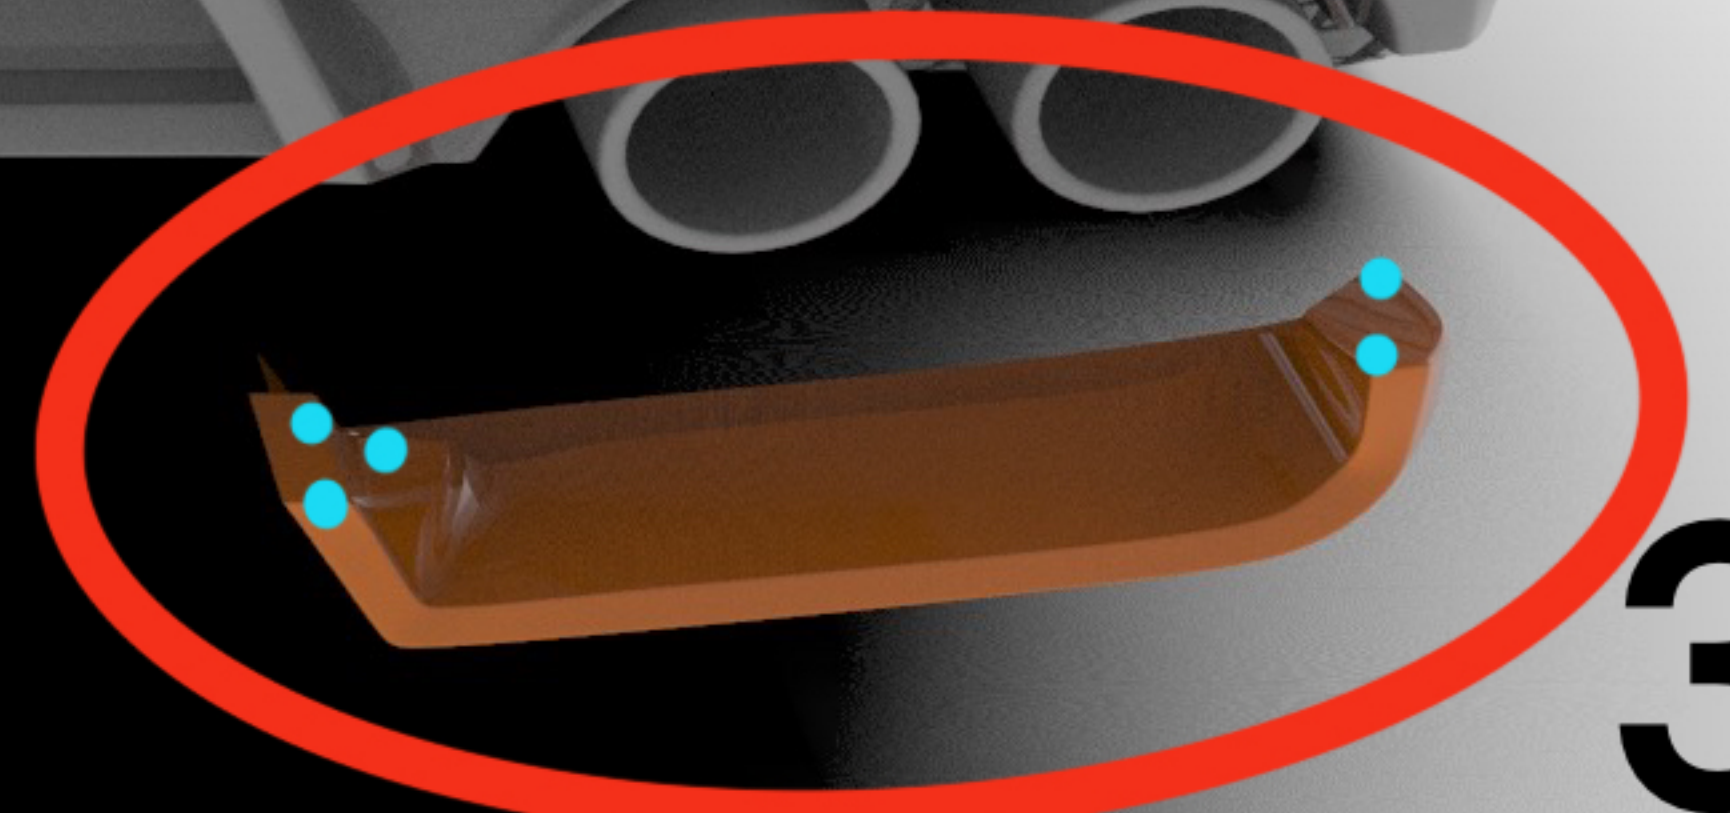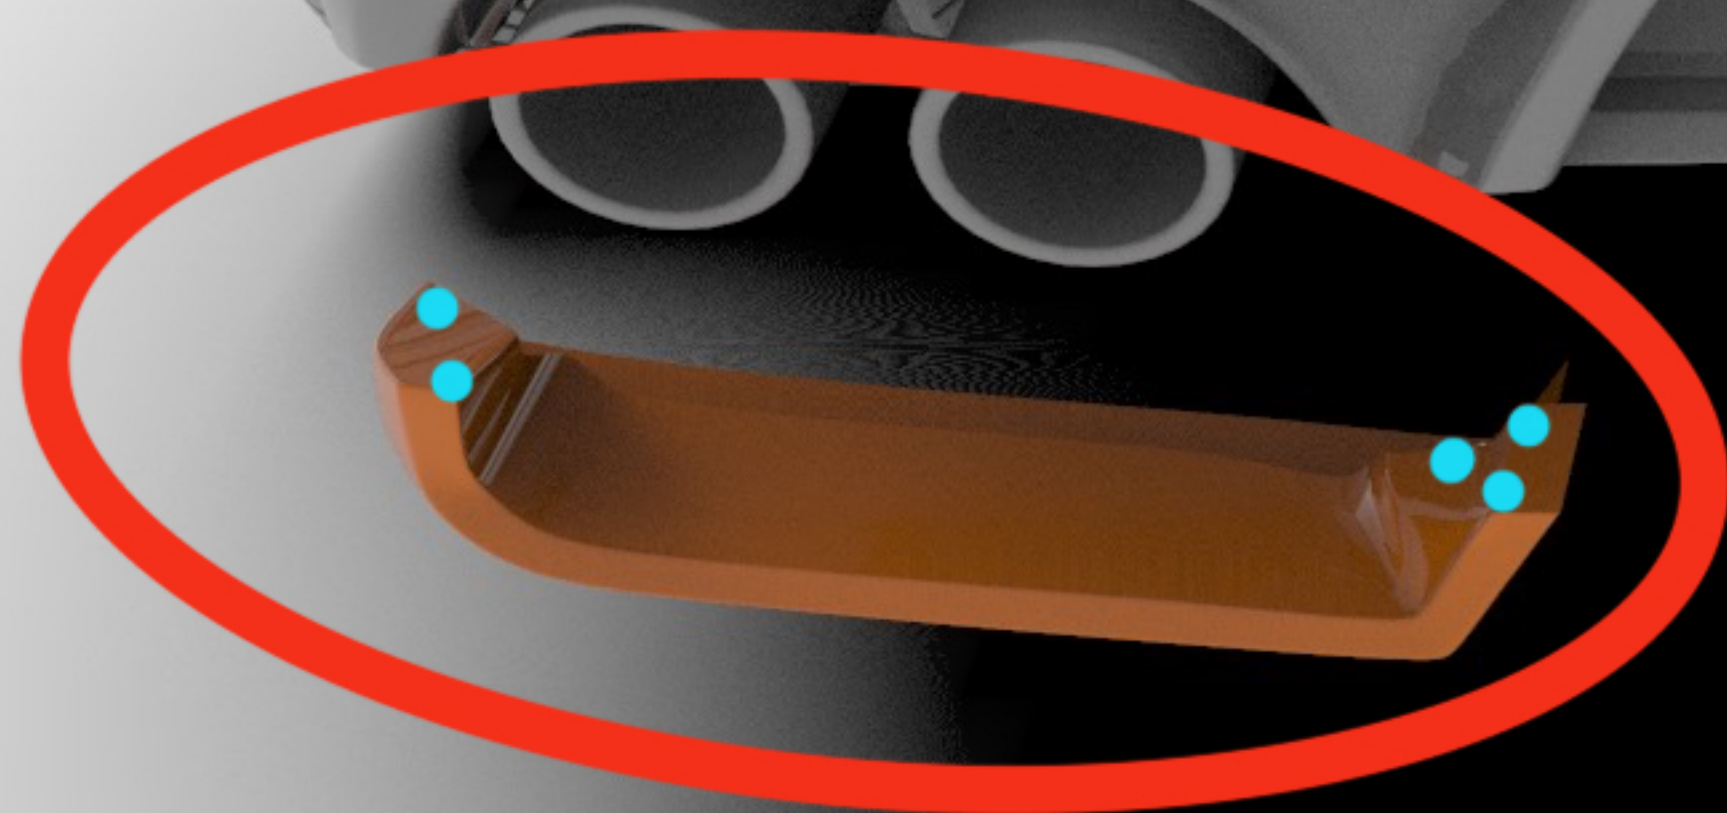

Install the side parts with the bolts that you will find in the box, use a narrow washer on the part's side and a wide one from the inside of the original diffuser. VERY IMPORTANT: tighten the bolts in sequence as in the photo, it makes no sense to tighten the bolts too much you can damage the plastic parts, tighten the bolts with a sense of proportion.



Degrease the edge of the part and the original diffuser as shown in the picture. Take velcro tape and glue one side along the inner edge of the diffuser as shown in the picture, so that the tape is not visible from the front. Apply the part so that it fits optimally with the original diffuser. Mark the fit line of the part with paper tape, remove the part and glue the back side of the velcro tape as shown in the picture along the paper tape line.

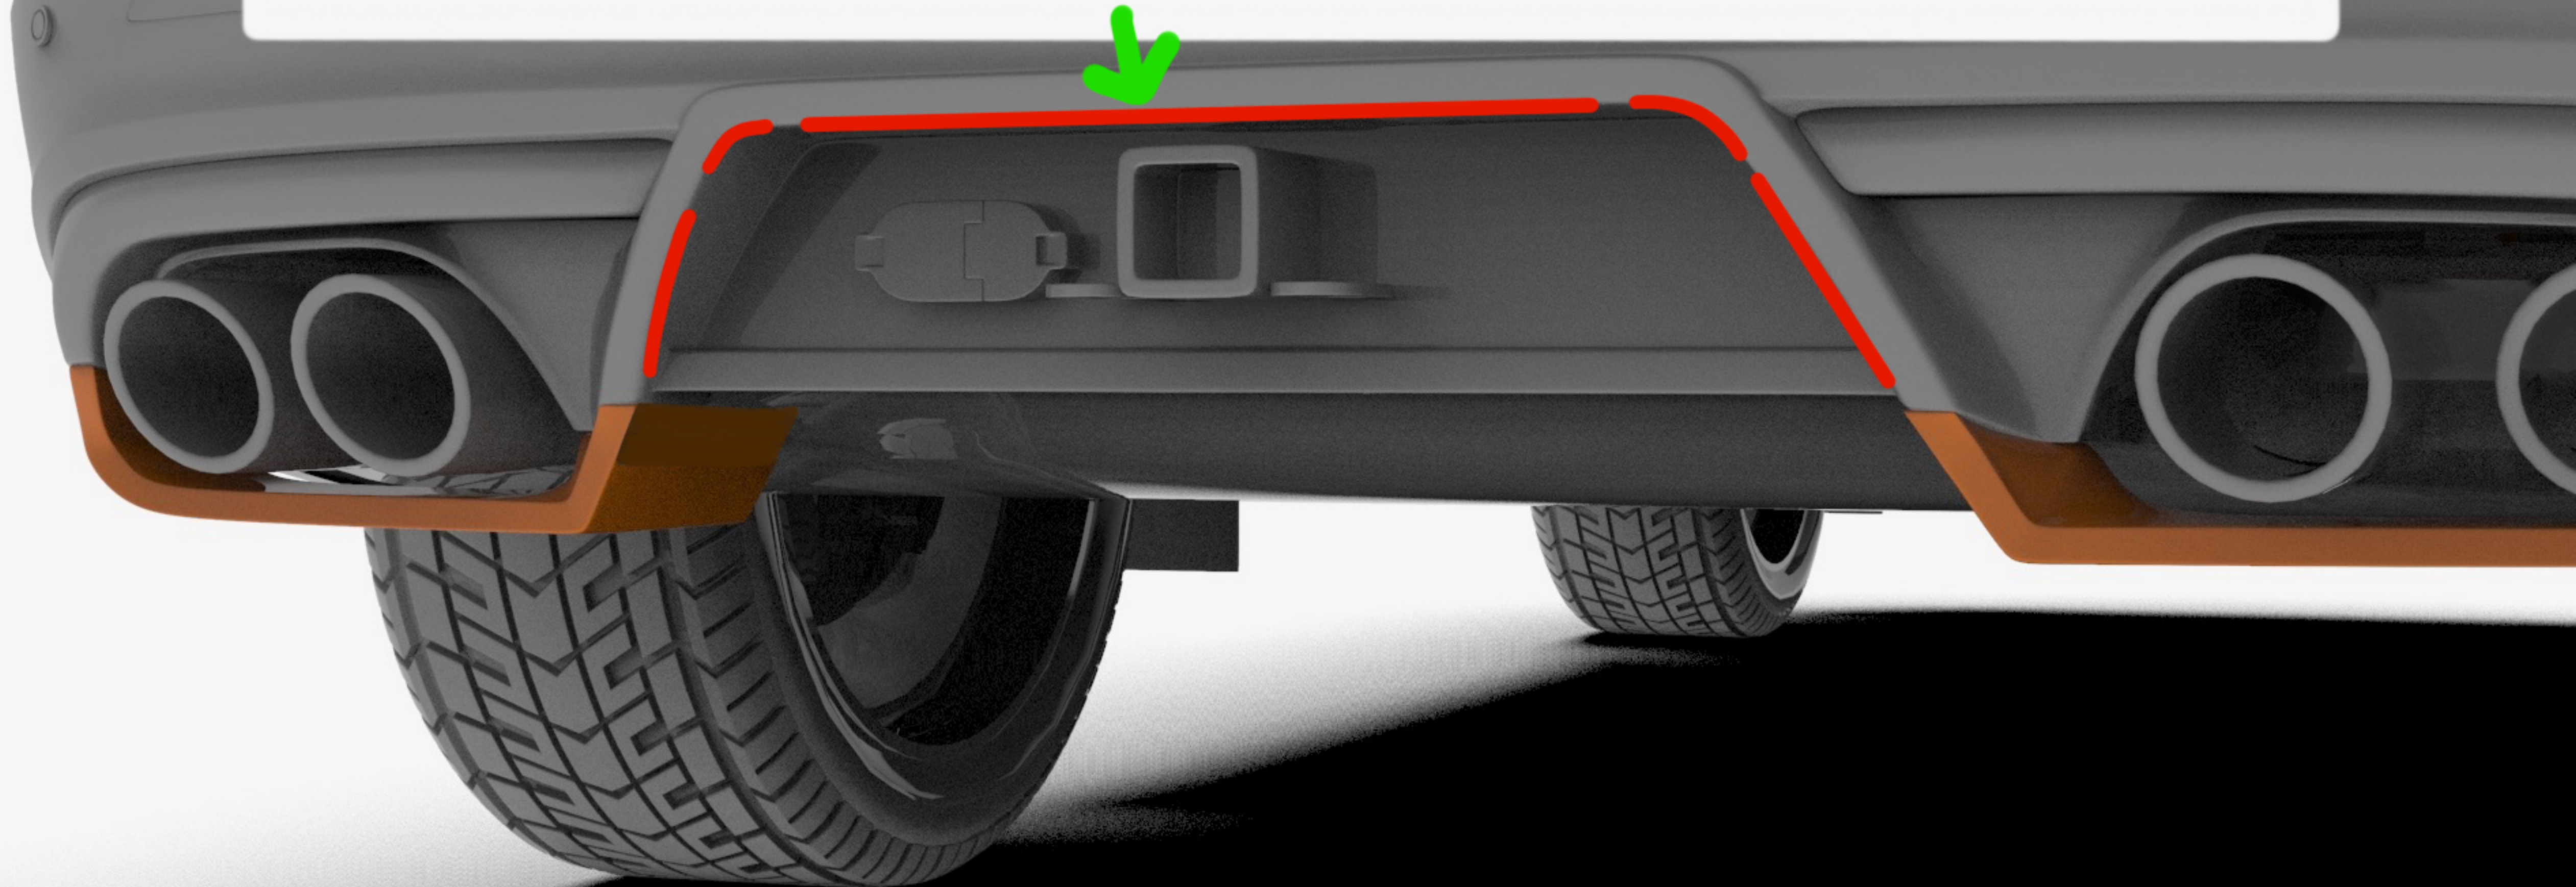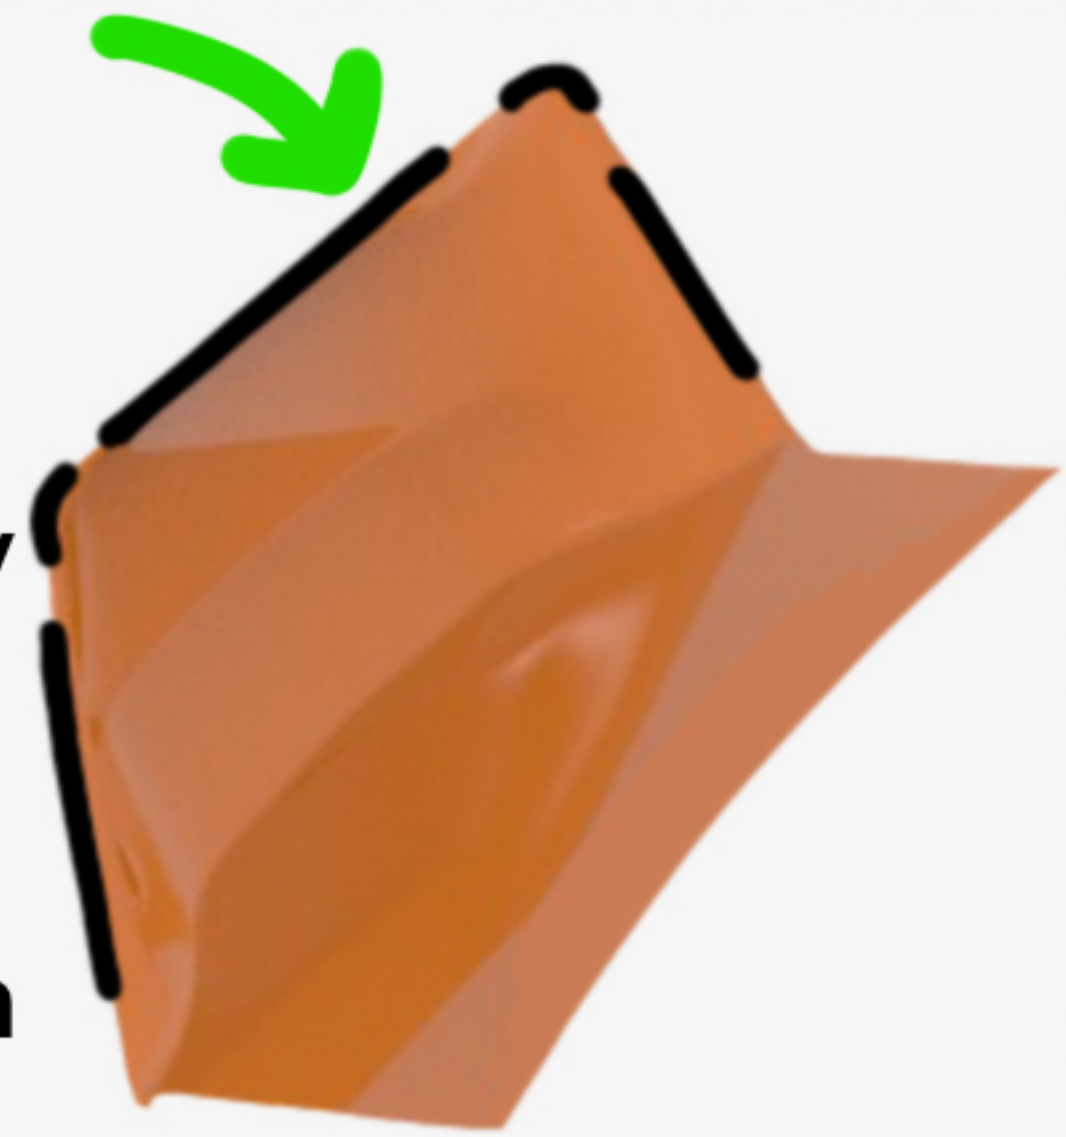


At the bottom of the original diffuser you will find original holes (marked in the photo). After you have installed the top-middle part on the car, ask someone to hold the part and press the part from the bottom to the original diffuser, on the inside of the original diffuser make a marker of marks on the parts, and then drill the part. Make the hole a little larger than the original hole so that you can later fit the part more easily.




Make the same holes in the same way in the lower part and fasten both parts and the original diffuser with bolts. Mark the edges of the bottom part adjacent to the side parts with paper tape. Remove the bottom part and glue Velcro tape to the side parts and to the bottom part, reassemble everything back with bolts and Velcro tape. Note: if you do not plan to remove and put the parts back constantly, you can replace velcro tape with double-sided tape, for example, 3M.



Thank you for choosing Waido! Enjoy!

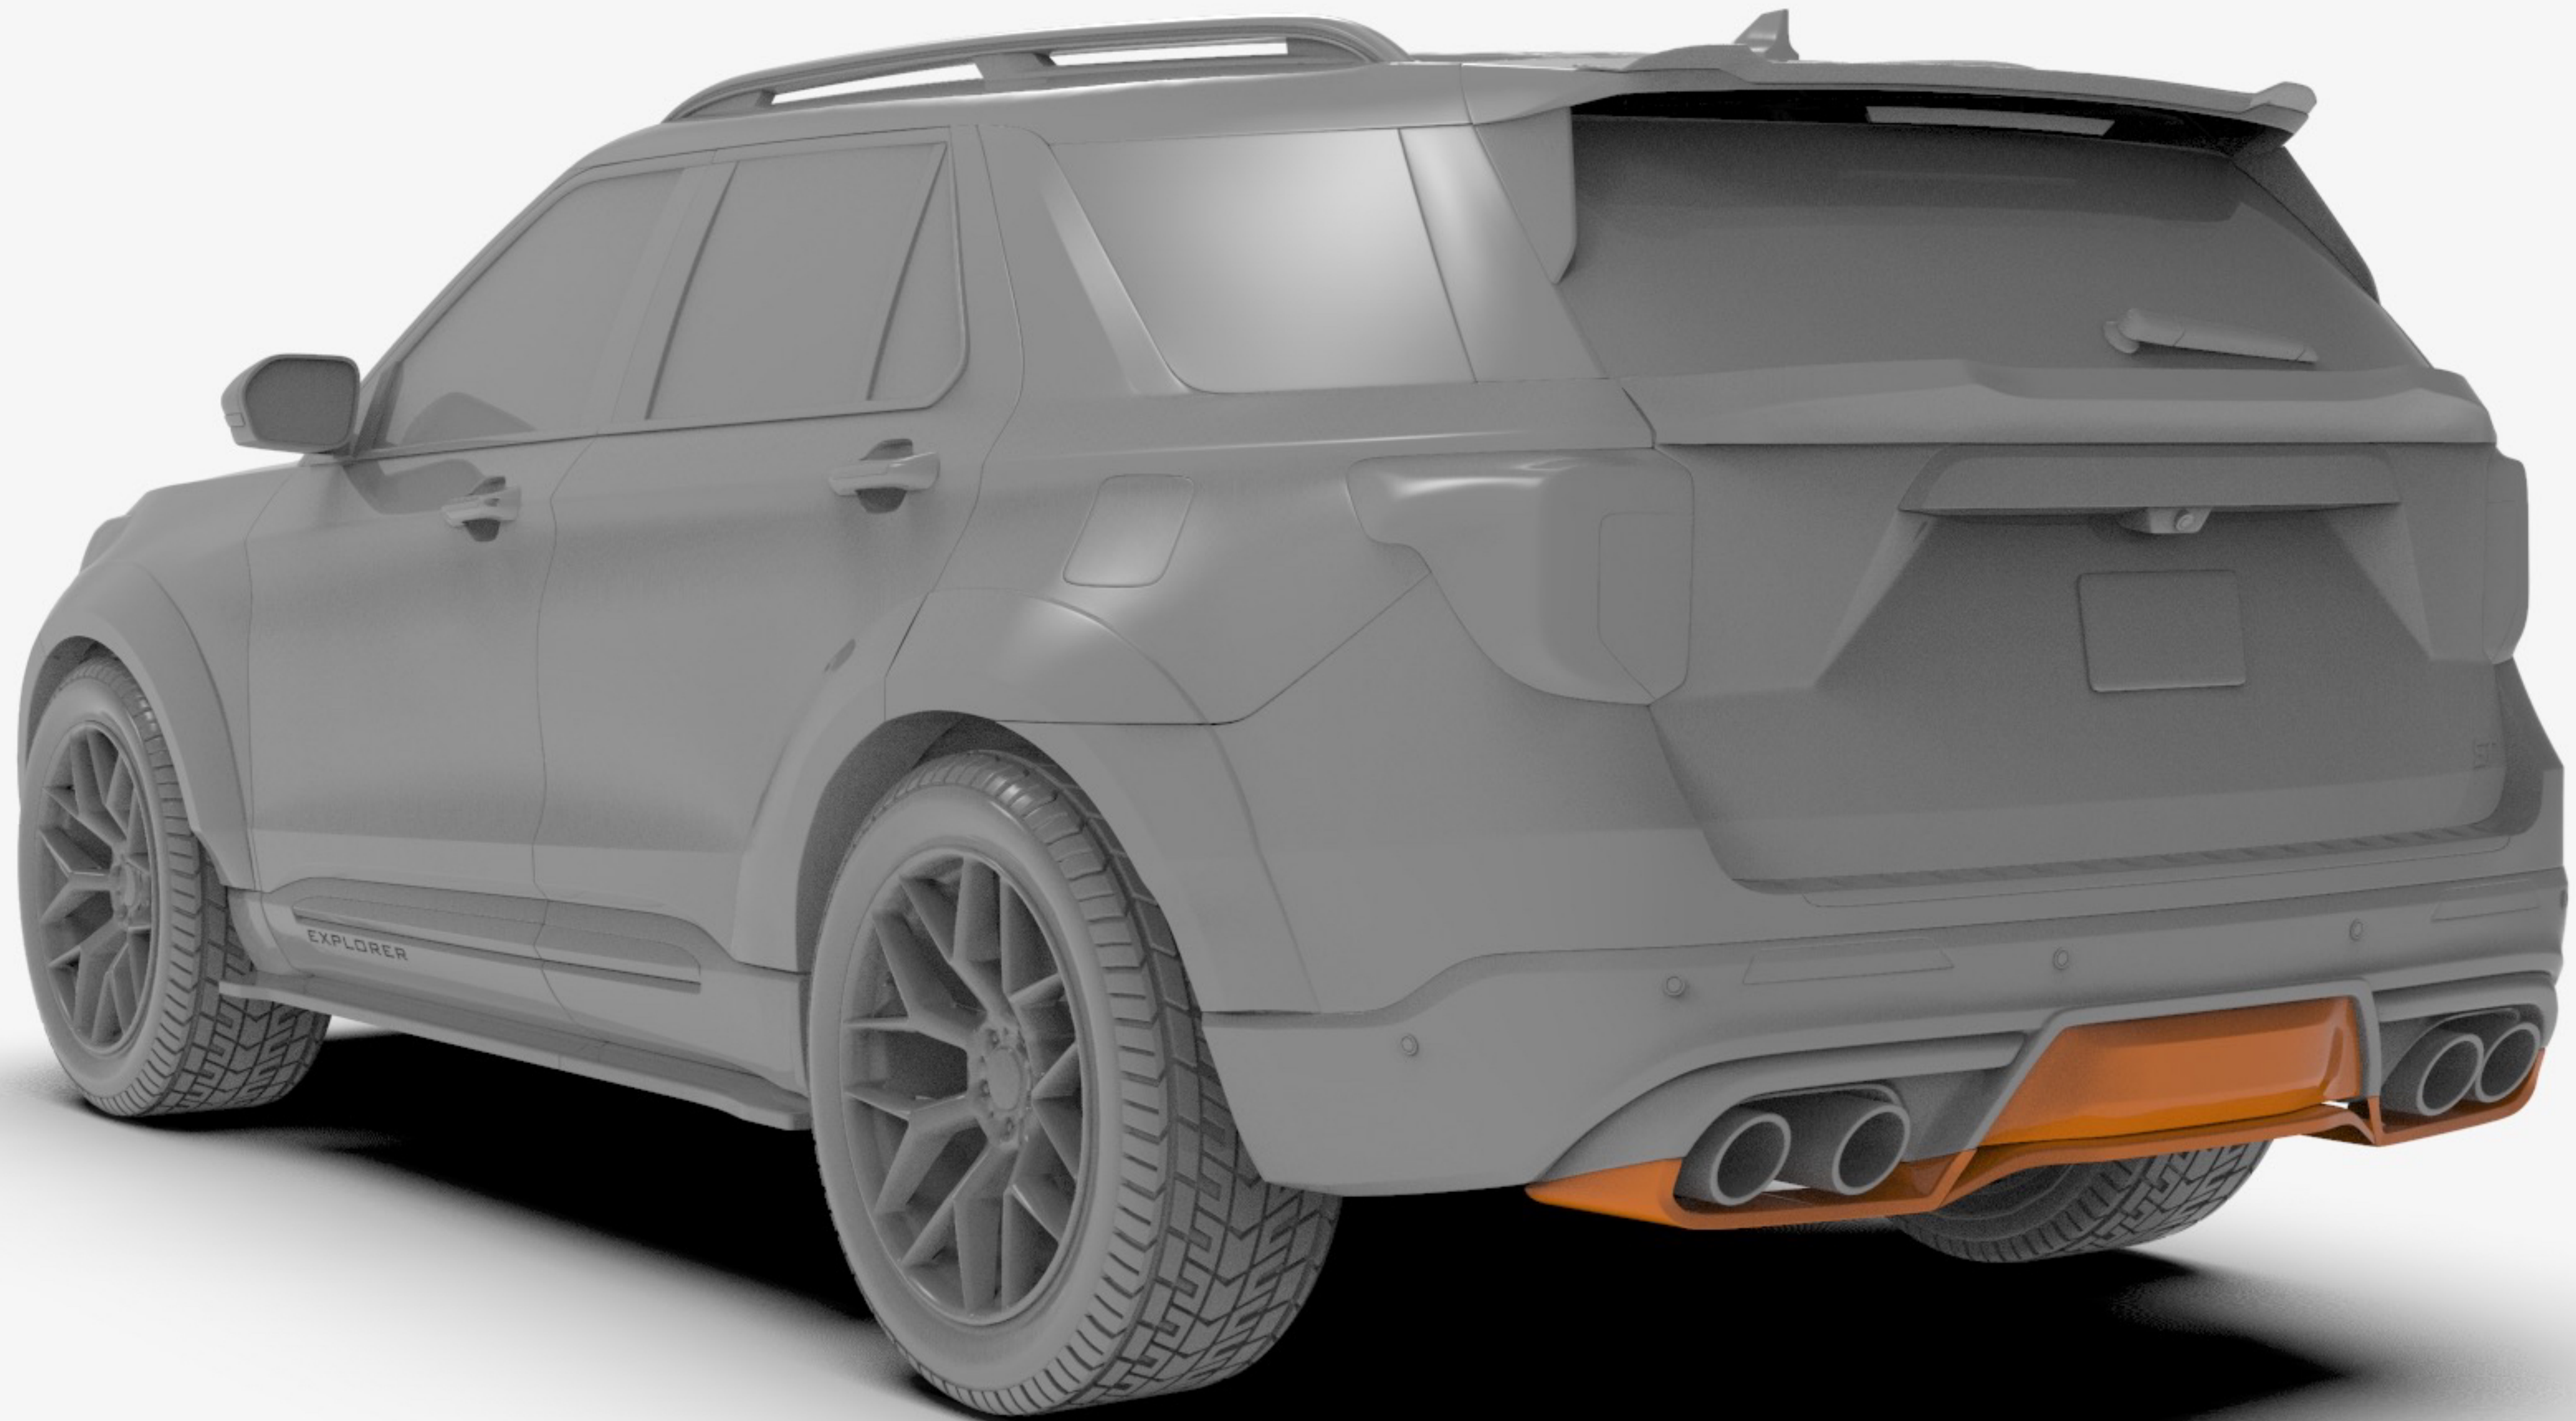

**Don't forget to check out
even more of our
products for your car**

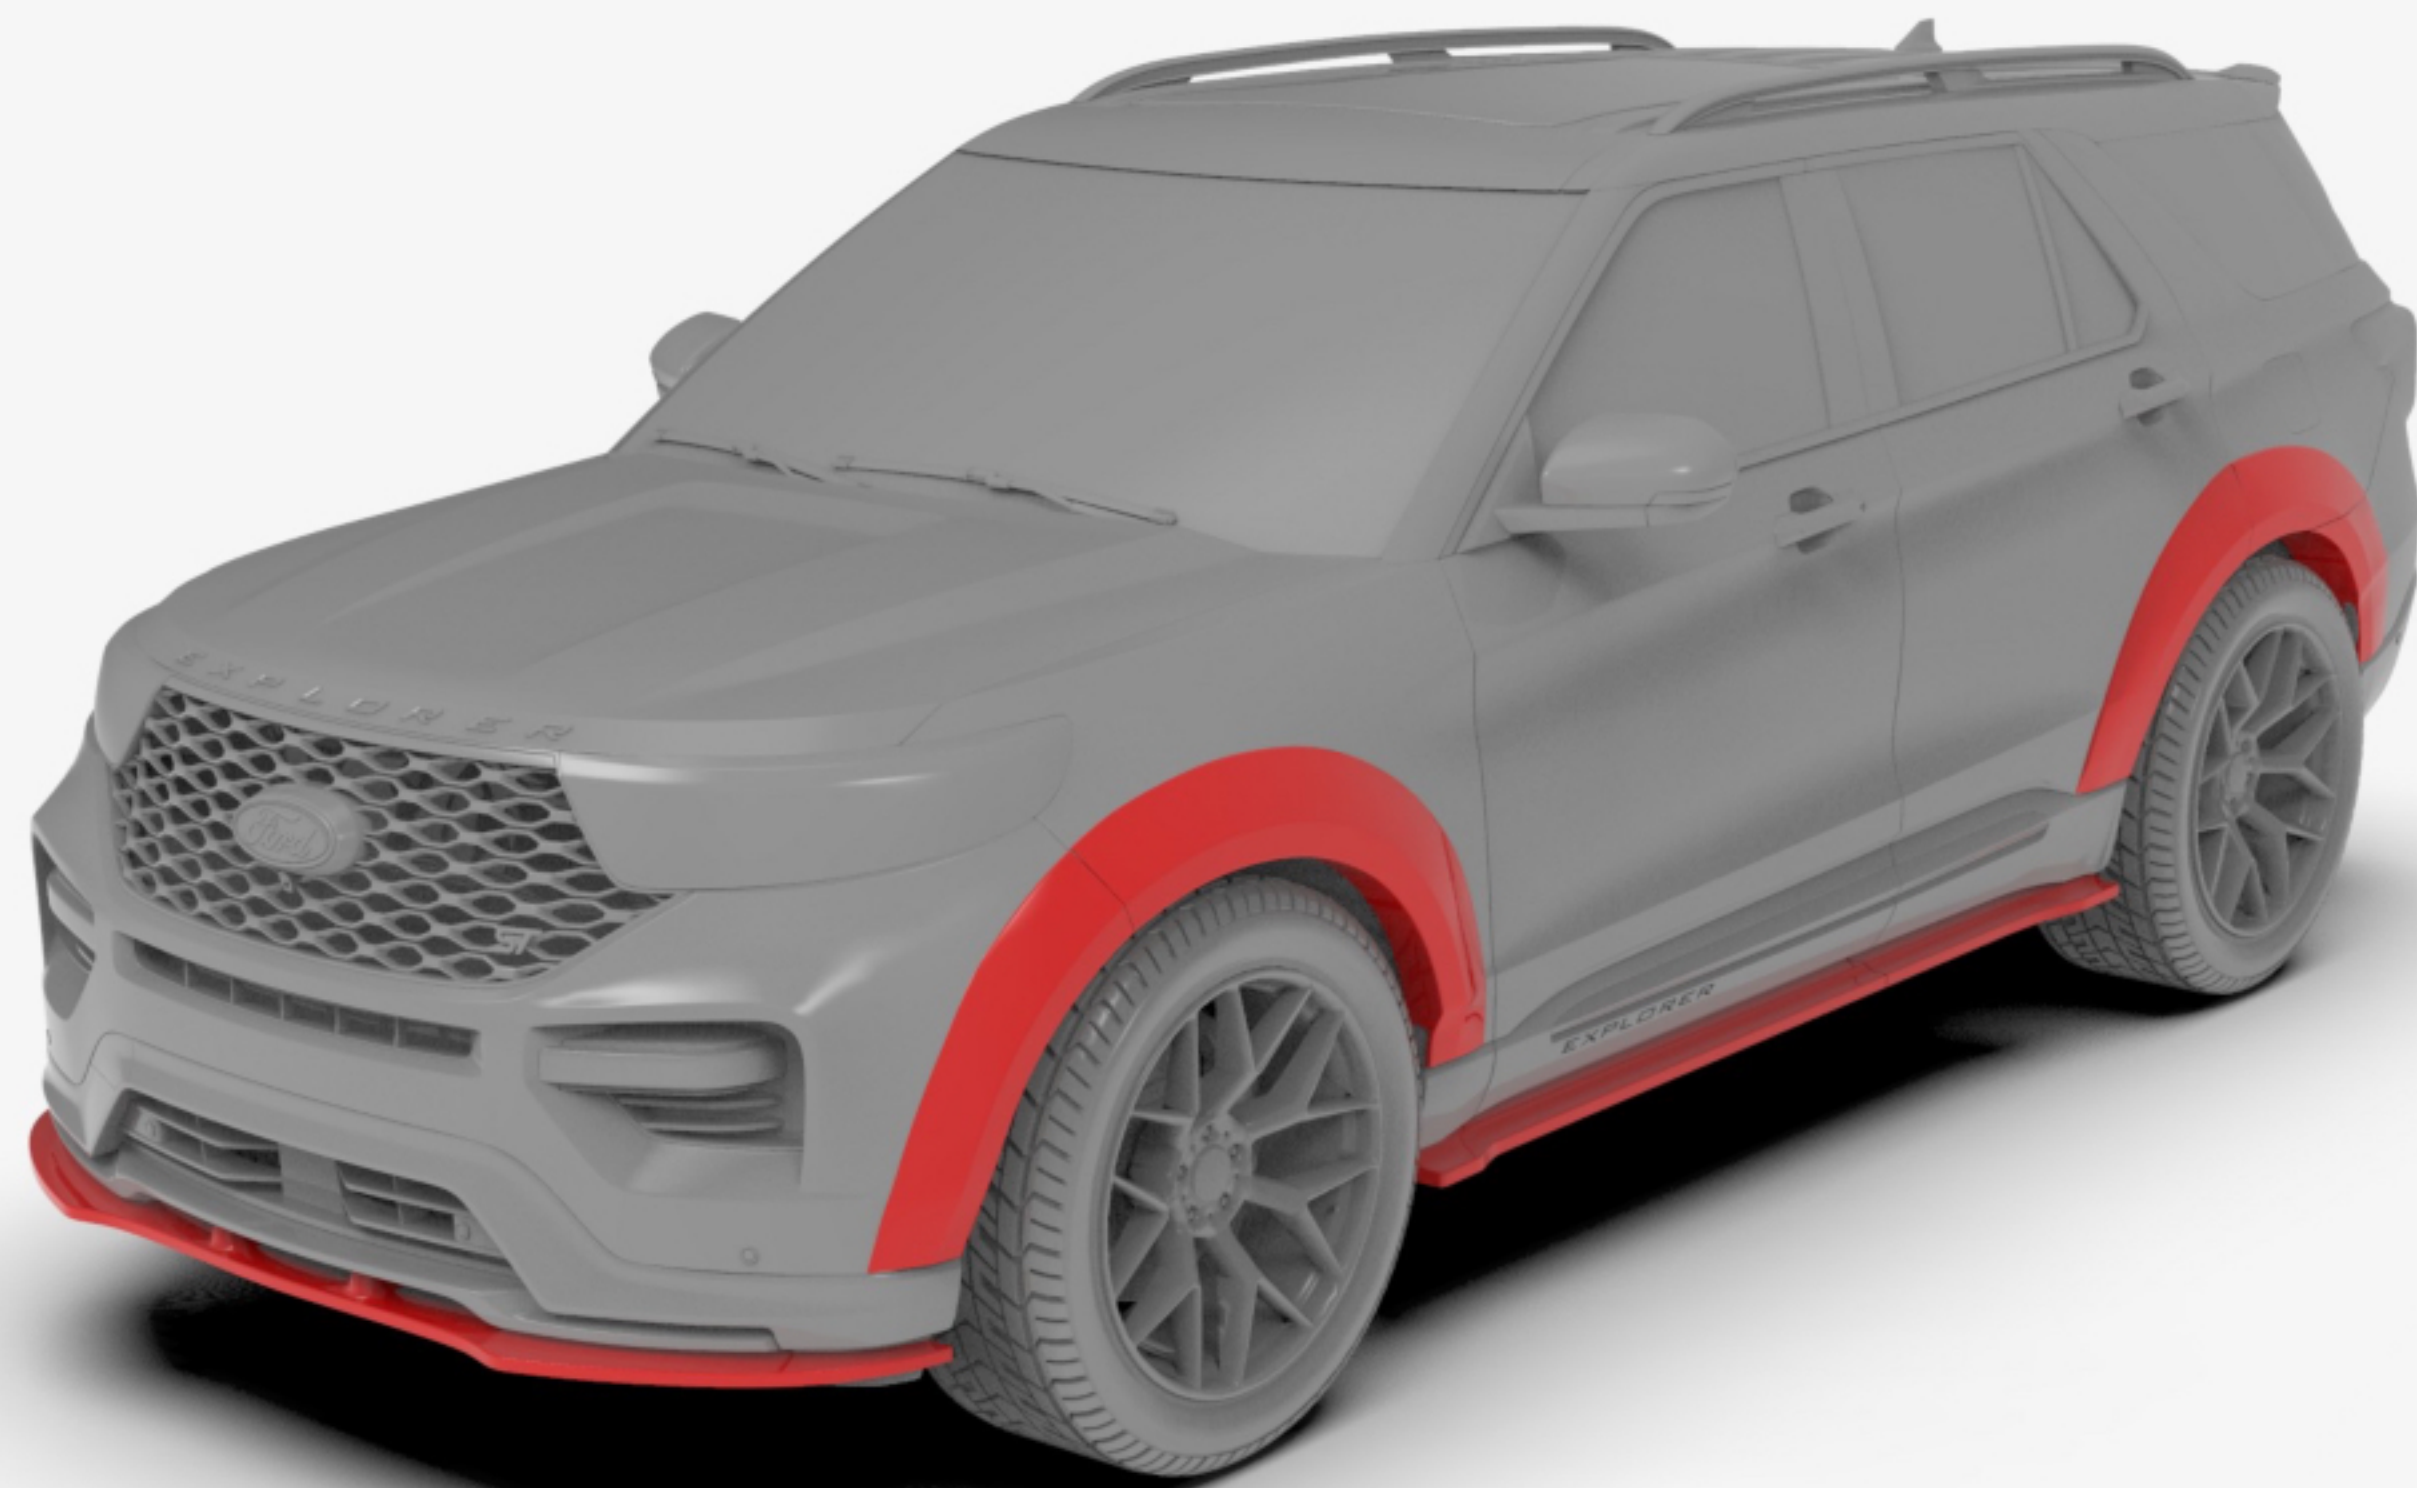

only on waido-kits.com





Thank you!

If you have any questions please contact us on
Instagram: [waido.kits](#) or e-mail waido.kits@gmail.com