




Waido
Ford Explorer
Mid Spoiler
Installation Manual



Firstly, please check that the part is not damaged.
This instruction assumes that the part is already painted, if you ordered the part in primer coat, please have the spoiler painted in your local bodyshop.



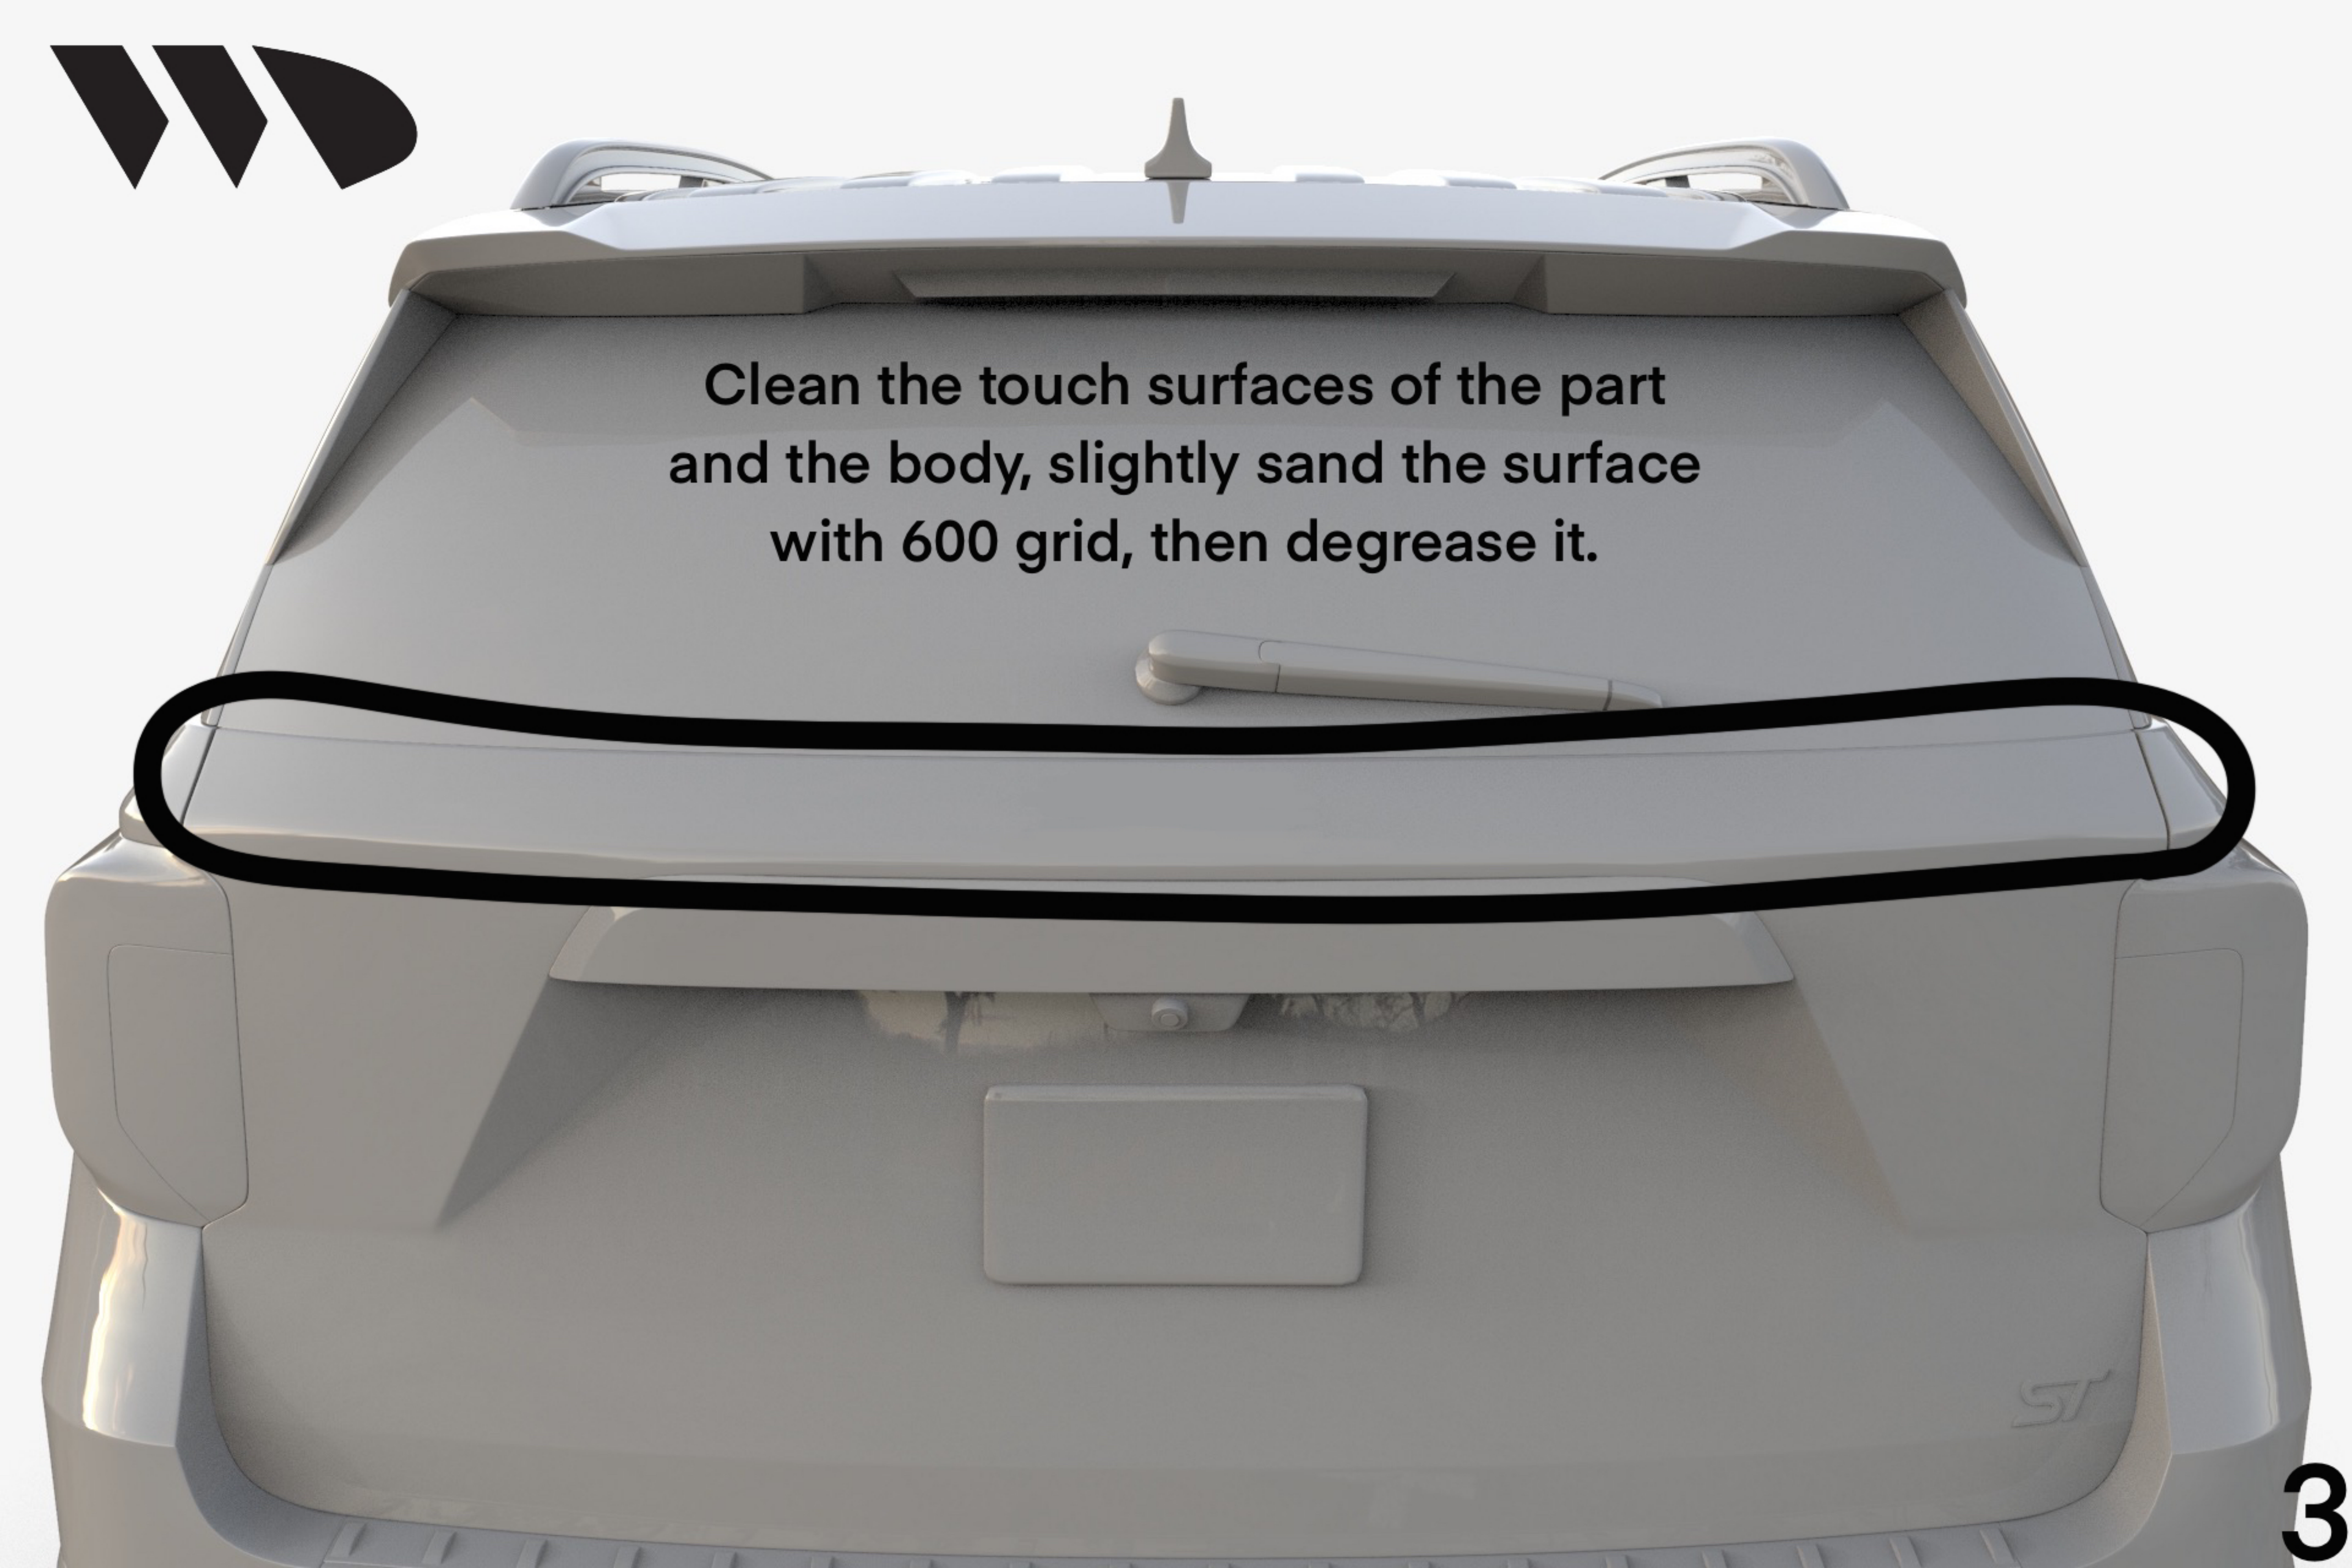


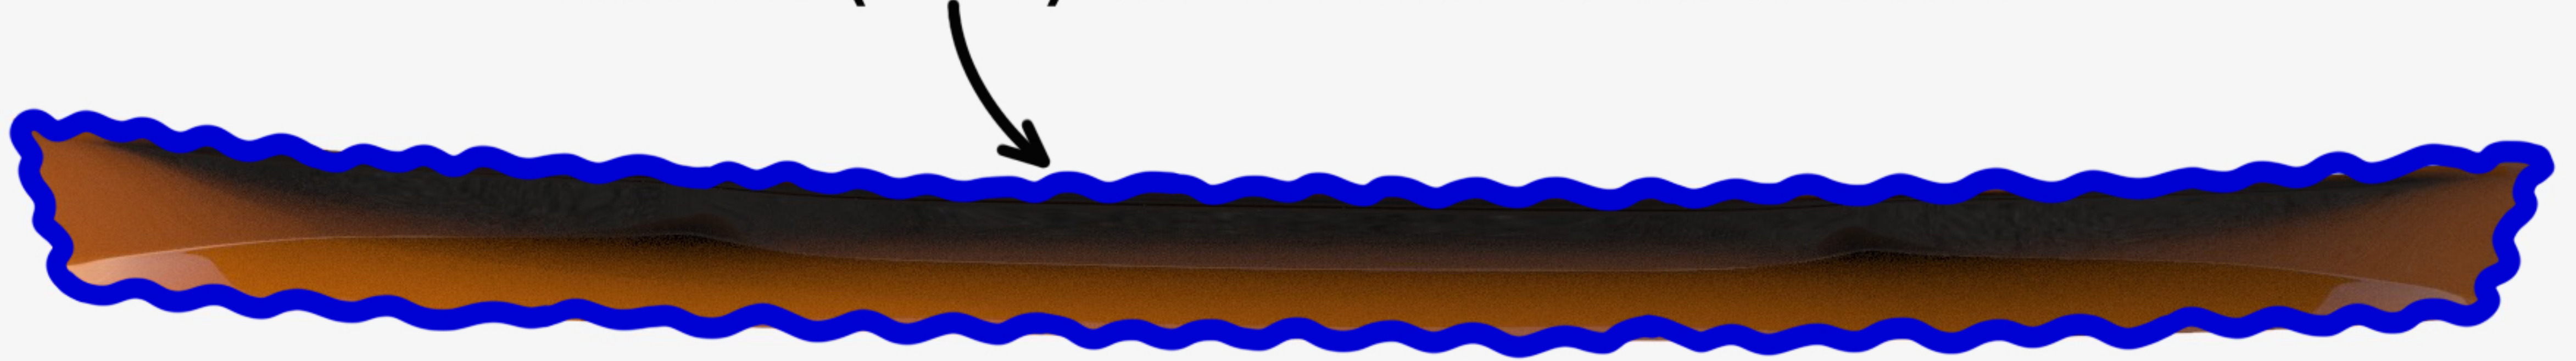
Clean the touch surfaces of the part
and the body, slightly sand the surface
with 600 grid, then degrease it.



Clean the touch surfaces of the part and the body, slightly sand the surface with 600 grid, then degrease it.



Do not use double sided tape here, it's not going to secure the part well enough, we recommend to use the adhesive () that we offer on our website.



When gluing the part, the adhesive should squeeze out from under the part when pressure is applied, so you can ensure that you have used enough. It is important to press the part well with your hands to the car body and secure it with a large amount of masking tape (the tape must be stretched, but not too much). If you glued the part crookedly, you have some time before the glue starts to dry to fix it. After the installation, clean the adhesive residue with a silicone cleaner or a degreaser used before painting the part.



Thank you!

If you have any questions, please contact us on
Instagram (@waido.kits) or e-mail waido.kits@gmail.com